

MAINTENANCE AND CLEANING

Regular cleaning (weekly) is needed to keep your product in a nice condition. Use warm water with a soft detergent and cotton cloth. We advice the **FlexPlus cleaner™**, a special universal cleaner for maintenance and keeping your product fresh.



**WARM
WATER**



**SOFT
DETERGENT**




**COTTON
CLOTH**



**FLEXPLUS
CLEANER™**

! **Advice** for outdoor usage for **FlexPlus™** products:

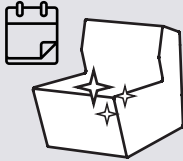

Weekly cleaning is needed to keep your product clean and avoid staining



Storage: keep your furniture inside and dry during extreme weather conditions.

! **Remark:** dirt that is left onto the furniture will settle into the skin of the coating and leaves marks

! Things that should be **avoided** on **FlexPlus™** products:



coffee, red wine,
champagne, mayonaise, ...



No jumping on
the furniture



No shoes, no high
heel on the furniture